



Liftomatic Material Handling, Inc.

700 Dartmouth Lane
Buffalo Grove, IL 60089

Phone 847 325-2930
Fax 847 325-2959
Toll Free 800 837-6540

LIFTOMATIC OWNERS MANUAL

LIFTOMATIC “PARROT-BEAK®” DRUM HANDLING EQUIPMENT

PORTABLE UNIT SERIES THE “10HT-4W-PNC” HAND TRUCK FOR SINGLE DRUM MOVEMENT

WARNING: Do not install, operate or service this product unless you have read and understand the safety practices, warnings, and operation and service instructions contained in this manual. Failure to follow these guidelines may result in less than efficient drum handling routines. Please consult Liftomatic if you require additional information or if you have questions. (PH: 800.837.6540 or FAX: 847.325.2959 or email: info@liftomatic.com). Thank you very much for your business.



Liftomatic Material Handling, Inc.

700 Dartmouth Lane
Buffalo Grove, IL 60089


Phone 847 325-2930
Fax 847 325-2959
Toll Free 800 837-6540

LIFTOMATIC “PARROT-BEAK®” MODEL 10HT-4W-PNC OPERATING/MAINTENANCE INSTRUCTIONS


- 1) Position the unit in an upright vertical position alongside the drum to be engaged.
- 2) Pull lever handle (figure#1) towards you to open the Parrot-Beak® clamping mechanism. Doing so allows you to raise and lower the clamp along the post (figure #2).
- 3) Position the inner jaw (figure #3) of the clamping mechanism over the inside cover of the drum to be handled and lower the clamp until it rests against the top cover of the drum.
- 4) Push lever handle (figure #1) forward so that the lower jaw of the clamp (figure #4) locks against the underside of the drum cover and/or locking ring.
- 5) Place both hands on the handle bar grips on the post (figure #5) and place foot squarely on the foot post of the chassis (figure #6). Simultaneously push your foot outward, away from you while pulling the handles back towards you to break the drum into a transporting position. Let the drum lower until the weight is resting on the two small caster wheels (figure #7) on the chassis. The drum can now be wheeled to any desired location.
- 6) To invert the drum to the vertical position, simply reverse the steps in #5 above. **NOTE!!! Keep your foot on the footpost at all times during the “lowering” and “return to vertical” operations. Not doing so will make it extremely difficult to break the drum and to control it during the “return to vertical” operation. Should you experience any difficulties, contact Liftomatic at 800-837-6540.**

MAINTENANCE INSTRUCTIONS

- 1) Before each use, ensure that all bolts, fasteners and hardware are tightened and securely fastened to the unit. Check all nuts, washers and cotter pins / snap rings for wear and need of replacement.
- 2) Monthly, spray a light grade oil throughout the moving parts of the Parrot-Beak® clamping mechanism to free it of any dust, debris or foreign matter.
- 3) Periodically grease large 10” front wheels through zirk fittings on each wheel;
- 4) Check wheel tread periodically and replace as necessary.
- 5) Occasionally lubricate rear small caster wheels with industrial grade lubricant to ensure range of motion.

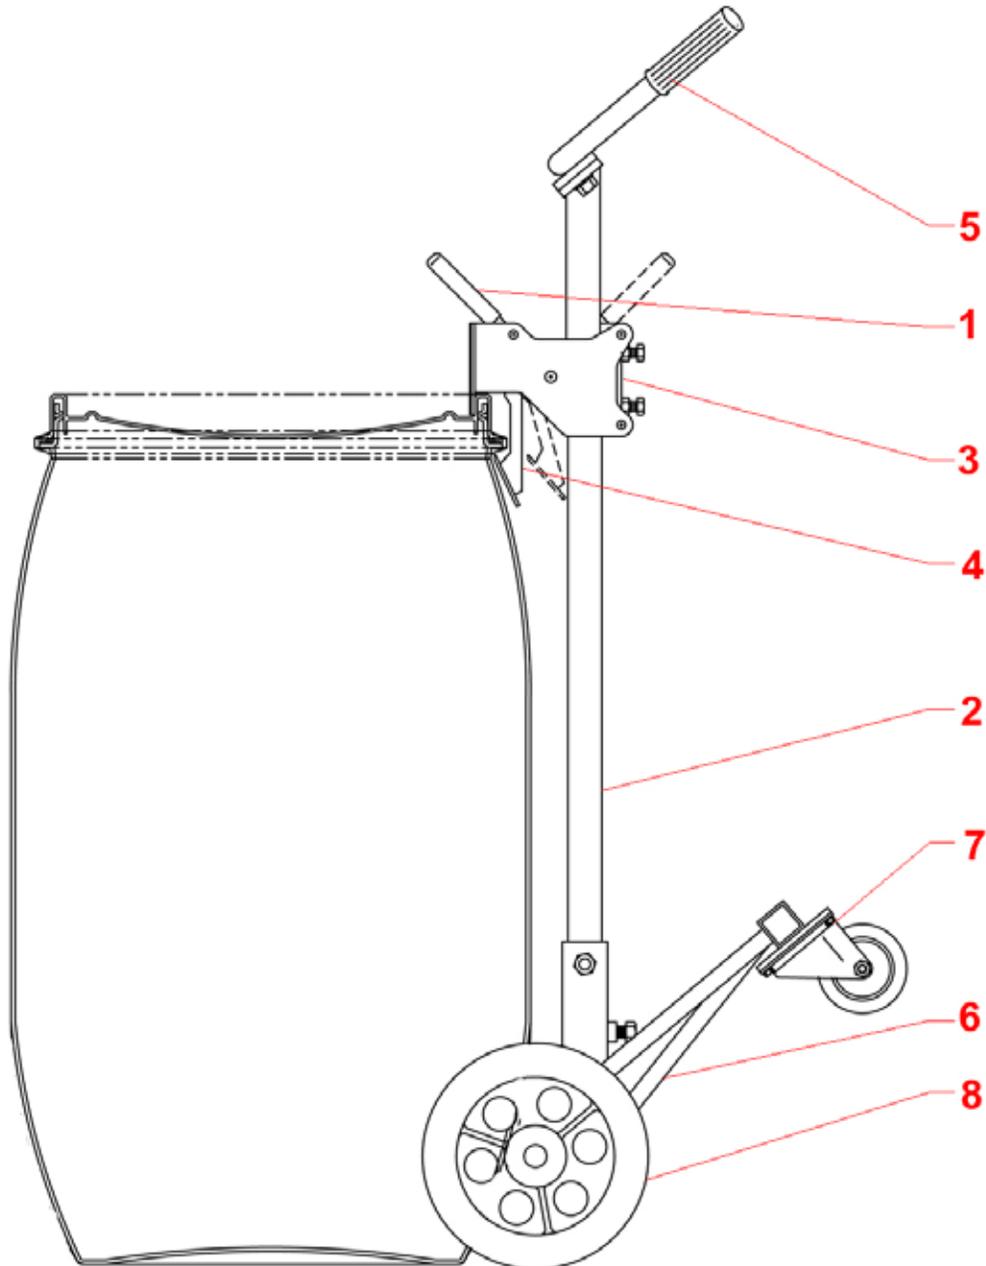

10HT-PNC DRUM HAND TRUCK

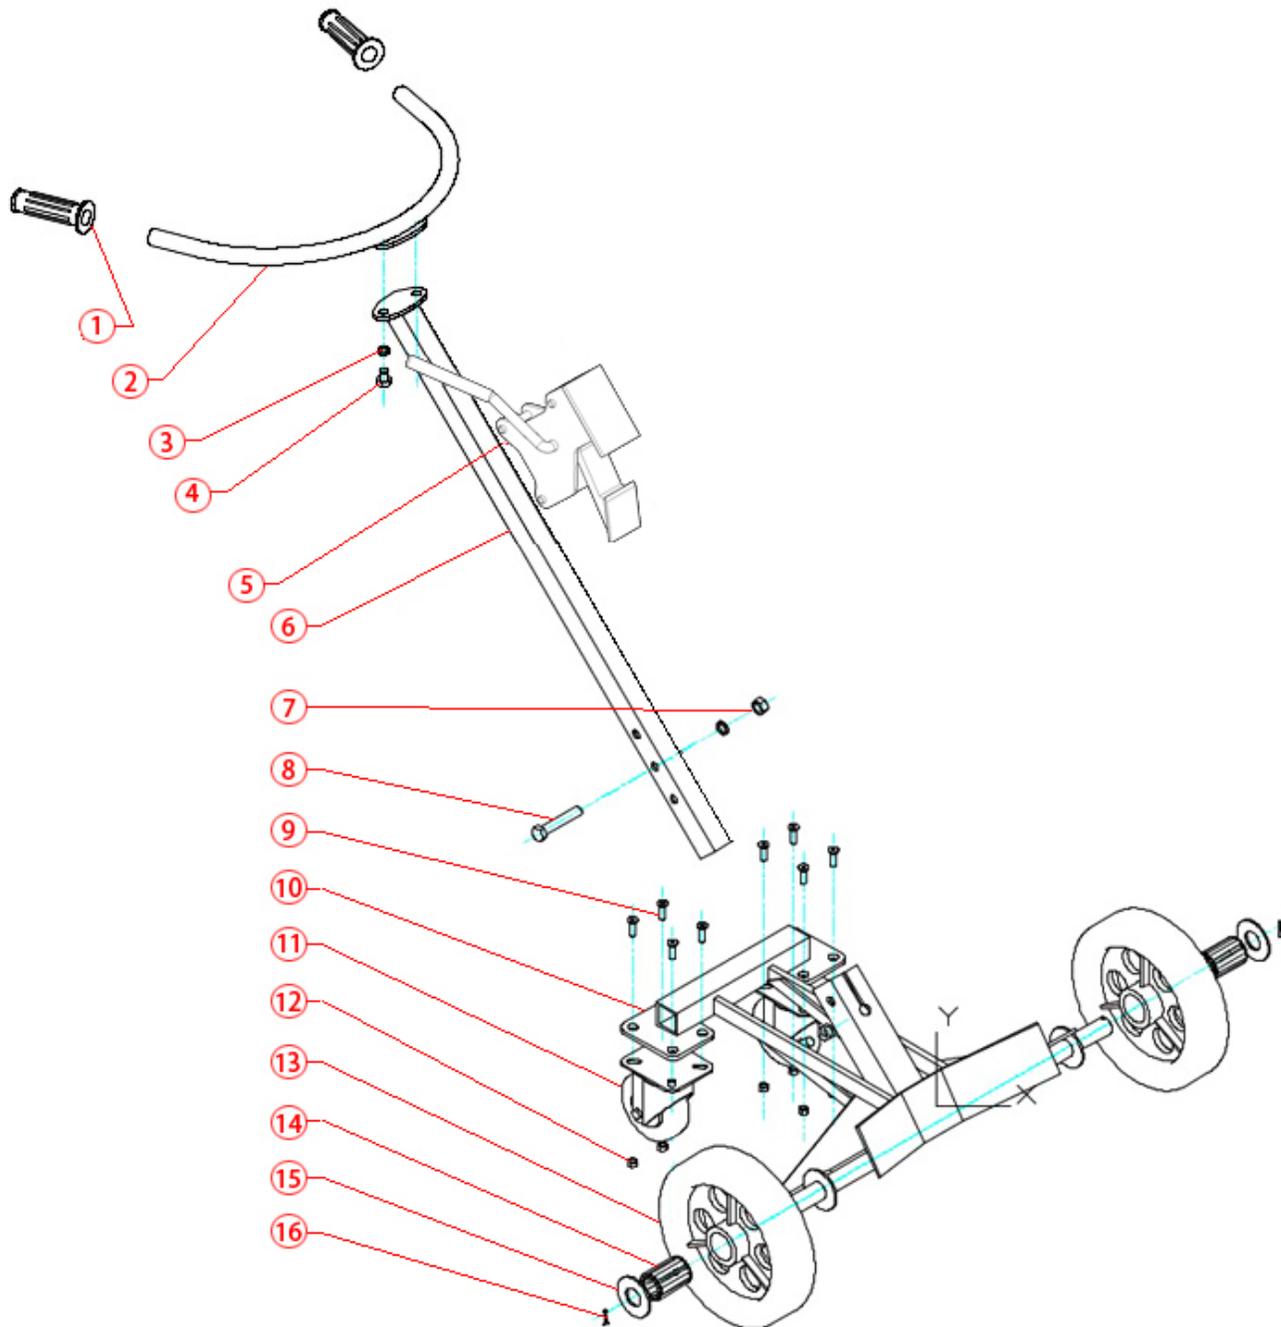

SCHEMATIC for 10HT-PNC DRUM HAND TRUCK



Liftomatic Material Handling, Inc.

700 Dartmouth Lane
Buffalo Grove, IL 60089

Phone 847 325-2930
Fax 847 325-2959
Toll Free 800 837-6540

PART LIST for 10HT-PNC DRUM HAND TRUCK

No.	Part Number	Quantity	Description
1	6995	2	HANDLE GRIP
2	2161	1	HANDLE
3	6078	3	LOCK WASHER
4	6142M	3	CAP SCREW
5	4015-PNC	1	PNC CLAMPING ASSEMBLY
6	2162	1	POST
7	6322	2	HEX NUT
8	6144-M	1	BOLT
9	6145-M	8	SCREW, CASTER
10	2034	1	CHASSIS
11	6171	2	SWIVEL CASTER
12	6095	8	LOCK NUT
13	6161	2	FRONT WHEEL
14	6162	2	BEARING
15	6071	2	FLAT WASHER
16	6061	2	COTTER PIN